


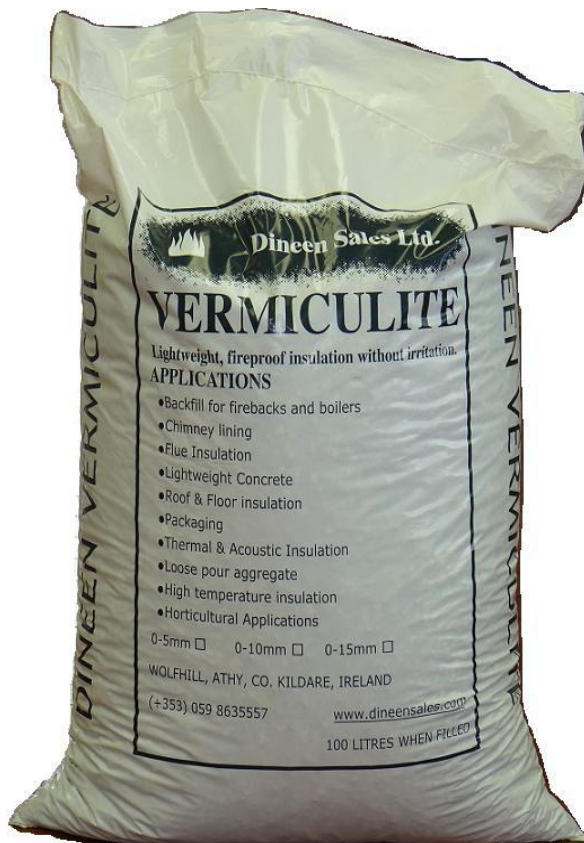

## How To Mix Vermiculite Concrete

### Materials needed:

- 1 No. 100 litre (or 2 X 50 Litre) bag of DINEEN Vermiculite (approx. 6 parts by volume).
- 25kg of Portland cement or [Cement Fondu](#) (approx. 1 part by volume)
- 40 - 50 litres of water.



Put your water in the mixer & add first 50 litre bag of vermiculite. At this stage the mixture should be a wet slurry mix.

Add the 25kgs of ciment fondu. Ensure to keep the mix very wet, add more water if you find it too dry.

Finally add the last 50 litre Vermiculite **slowly** until the mix comes to the correct consistency adding more water if necessary. (Ball in hand test)

