


Outside of domebrick use IT to

Slope of this angle is the same as the IT.
This is where the dome bricks will sit
and still keep shape of the arc of the
dome

Inside of dome brick use IT
to trace inside arch

Inside surface of dome can use
IT to trace arc

Tapered Arch Brick looking sideways

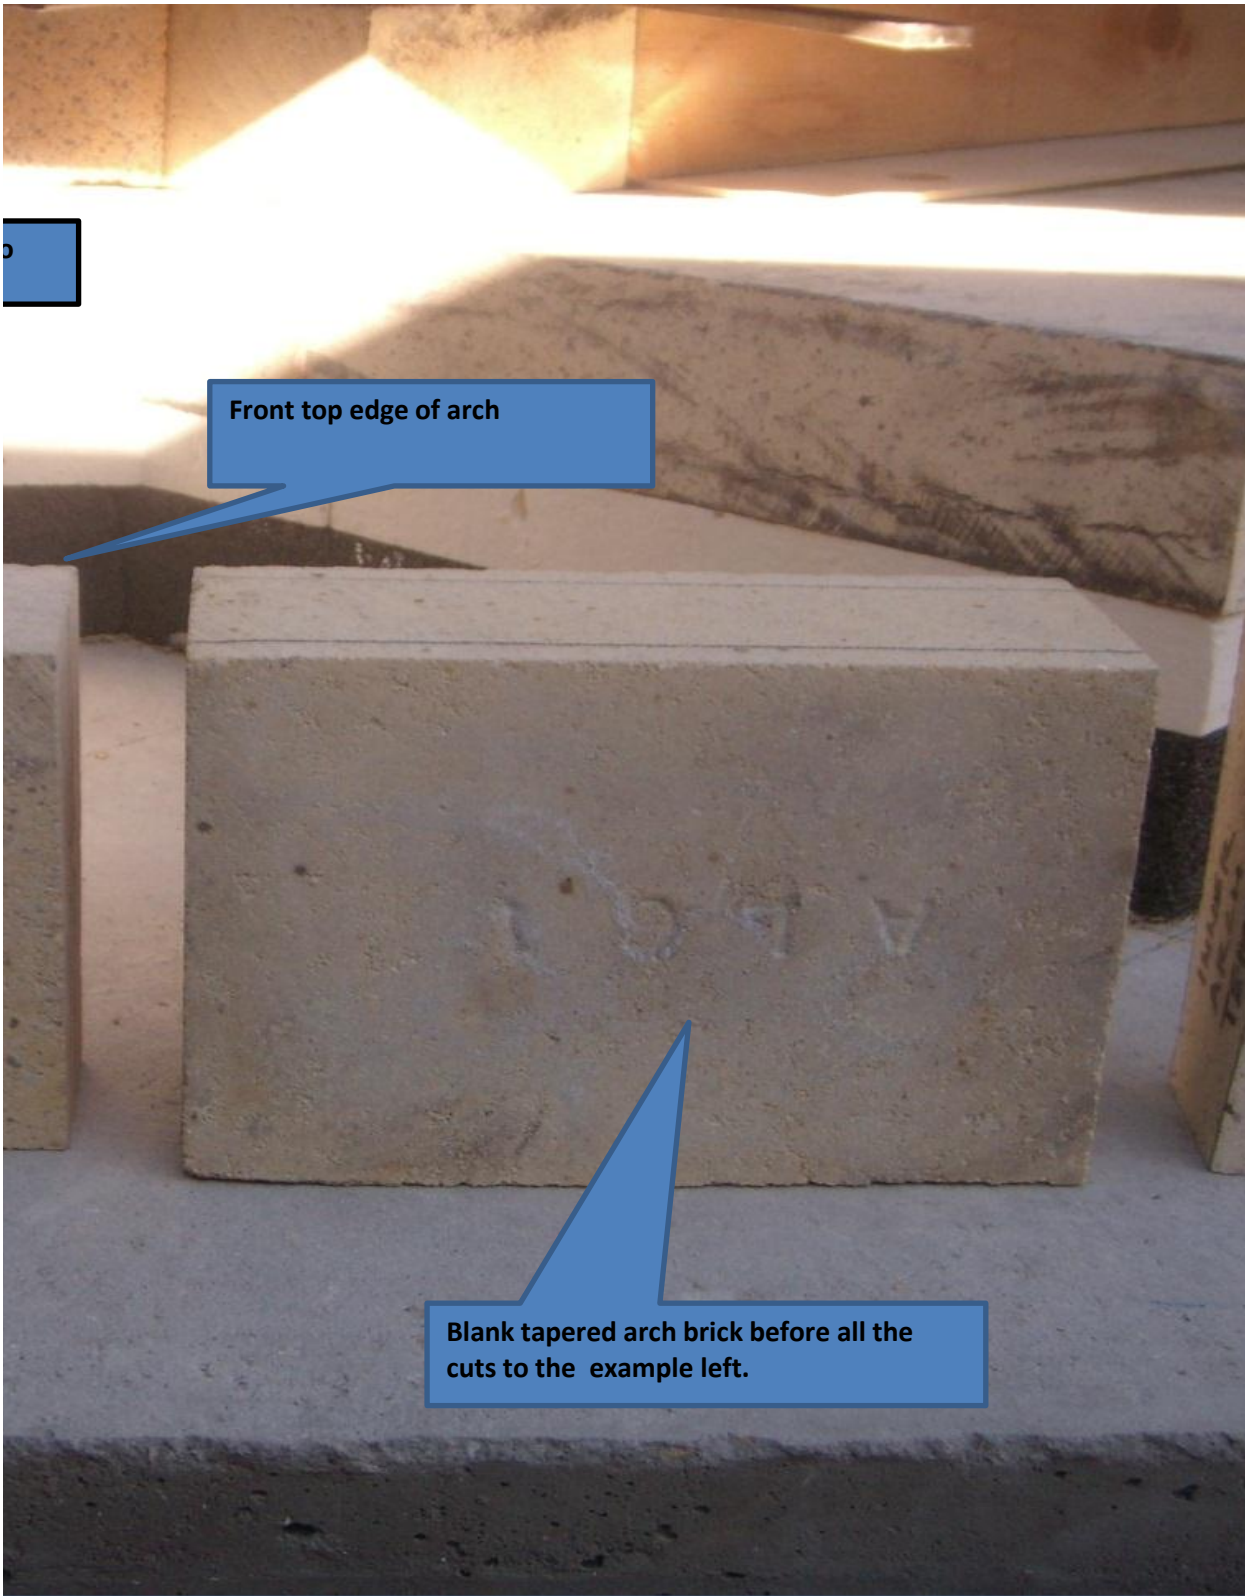

Front top edge of arch

Blank tapered arch brick before all the cuts to the example left.

